




## Replacing and Installing a 10 Function Remote.

Step	Description	Tools	Picture
1	<p>Models that Apply: EL02.10 (Elite two purchased with 10 function remote.), EL03.10 (Elite three purchased with 10 function remote.).</p> <p>Open the control panel by unscrewing the (4) Phillips-head screws in each corner of the control panel.</p>	Phillips Screw Driver	 <p>Control Panel</p>
2	Gently pull the control panel out, and allow it to rest below the opening in the red case.		 <p>Control Panel Removed</p>
3	Remove the protective strip from the adhesive side of the Velcro strip.		 <p>Velcro Strip/ Remote Receiver</p>

Replacing and Installing a 10 Function Remote.

4

Place the remote control receiver against the left side of the case near the center.

Press the remote control receiver firmly against the left side of the case with the single antenna wire facing forward and the wire connector, to the rear.

Make sure no wires became disconnected from the board, and the antenna is not under the Velcro.


*NOTE: If the antenna is under the Velcro, remote receiver may lose its connection with the transmitter, keeping it from working at a greater distance from the machine.*




Receiver Placement

5

Attach the wire harness connector from the remote control receiver, to the back of the green electronic board (PCB board) in the pins labeled “J3” or “Remote1”.

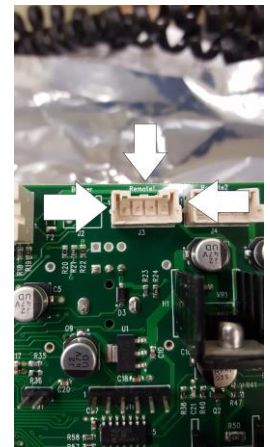

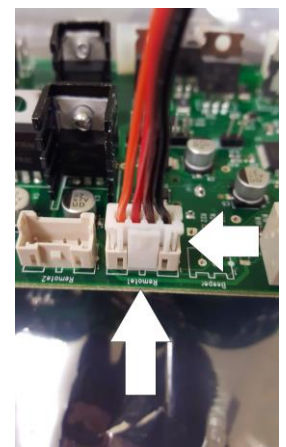

Remote Location on Board  
J3



Remote Connected  
J3

Replacing and Installing a 10 Function Remote.

<p>6</p>	<p>Ensure all wires are connected, and reattach the control panel to the red case using the (4) Phillips-head screws.</p> <p>Take extra caution to feed all wires into the case and ensure no wires are trapped between the control panel and the red case.</p>		 <p>Control Panel Re-attached.</p>
<p>7</p>	<p>Turn on machine.</p> <p>Turn remote switch on control panel to "ON".</p> <p>Test the Feed and SWEEP functions using the transmitter to ensure the remote receiver and transmitter are making connection. Press or Hold down the "elevation" button to adjust the elevation, "speed" to adjust the speed, and "spin" to adjust the spin.</p> <p><i>NOTE: There will be a 20 second delay from the time the machine is turned on before the remote functions become active.</i></p>		 <p>10 Function Remote Transmitter</p>

Standards	
1	Make sure everything is connected properly.
2	Make sure the antenna is not under the Velcro.
3	Receiver must be on the left side of the case in the center for best results.